Instructions For
The Motorized Control Rod

VELUX®

ZMT 300

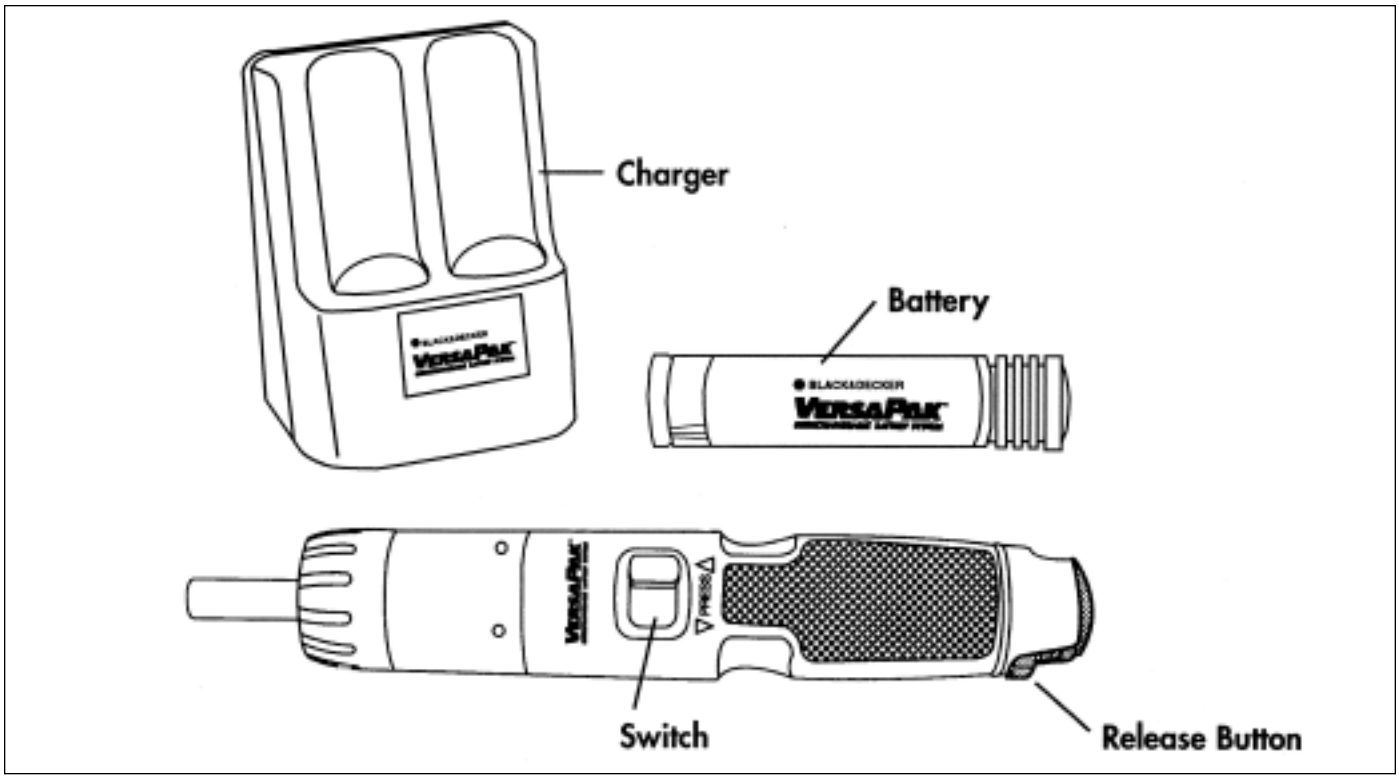

IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury:

1) Do not store or carry battery so that metal objects can contact exposed metal end. For example, do not place battery in aprons, pockets, tool boxes, drawers, etc. with loose nails, screws, keys, etc. Battery could short circuit causing fire, burns or damage to battery.
2) Never attempt to open the battery for any reason. If the housing of the battery breaks or cracks, discontinue use immediately and do not recharge.
3) Do not incinerate the battery; it can explode in a fire. Leakage of liquid from batteries can occur if damaged. If the outer seal is broken and this leakage gets on your skin:
   a. Wash quickly with soap and water.
   b. Neutralize with a mild acid such as lemon juice or vinegar.
   c. If the battery liquid gets in your eyes, flush them with clean water for a minimum of 10 minutes and seek immediate attention.

MEDICAL NOTE: The liquid is a 25-35% solution of potassium hydroxide.

4) Charge batteries with VersaPak battery charger. Charger recharges batteries in approximately three hours. Remove battery charger from the outlet after charging.
5) Do not use charger in wet or damp conditions. It is intended for indoor use only. Do not use near sinks, tubs, etc. Do not immerse in water.
6) Do not use charger for any uses other than charging VersaPak Batteries. Other batteries may explode.
7) Do not operate charger with damaged cord or plug. Have them replaced immediately.
8) Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way.
9) Do not disassemble charger. Incorrect reassembly may result in electric shock or fire. There are no consumer serviceable parts inside.
10) For best results, do not charge batteries when they or the air temperature is below 40°F or above 105°F.
11) The charger is designed to operate on standard household electrical power (120 volts AC only). Do not attempt to use it on any other voltage.
12) Unplug charger when not in use.
13) Do not abuse charger cord. To reduce the risk of damage to electric plug and cord, never carry charger by cord or roughly pull it to disconnect from receptacle. Keep charger cord from heat, oil, and sharp edges.

Removing and Installing Battery

NOTE: VERSAPAK‰ Batteries are not fully charged at the factory. To install the battery into the ZMT 300, simply slide it into the handle until it clicks into place. To remove the battery, press the release button and pull.

Switch

To turn the ZMT 300 ON in a forward direction, slide the switch button to the right and align it with the arrow pointing forward. Depress the switch button and the ZMT 300 will run. Release the button and the rod will stop.

To operate in reverse, slide the switch button to the left and align it with the arrow pointing backward. Depress the switch button and the ZMT 300 will run. Release the button and the rod will stop.

Cleaning

Use only mild soap and damp cloth to clean the tool. Do not immerse any part of the ZMT 300 into water or let water get inside.

The RBRC Seal

The RBRC‰ (Rechargeable Battery Recycling Corporation) Seal on the nickel-cadmium battery (or battery pack) indicates that the costs to recycle the battery at the end of its useful life has already been paid. In some areas it is illegal to place spent nickel-cadmium batteries in the trash or municipal solid waste stream. The RBRC program provides an environmentally conscious alternative.

V-USA-0726-0906 © 2006 VELUX GROUP www.veluxusa.com ® VELUX, VELUX logo are registered trademarks of VELUX Group